



The ETC 60 workhead is a disposable unit consisting of a stainless steel case containing:

- A quartz absorption tube
- The heating element
- The temperature sensor

WARNING



Electrical Shock Hazard

The ETC 60 MUST be switched off at the power switch, and the mains cable disconnected from the mains supply BEFORE any attempt is made to remove or replace the workhead, or the cables connecting the workhead to the Temperature Control Module. There is a potential electrical shock hazard if the temperature sensor outlet is touched while the workhead is hot and the instrument is still connected to the mains.

For information on installing the ETC 60 workhead, please refer to the ETC 60 Operation Manual (part number 8510137200) that is supplied with the ETC 60.

For further information about Agilent and our products, contact your local Agilent representative.



This information is subject to change without notice.



8510181600

Part Number: 8510181600

Edition 11/10
Issue 2
Printed in Australia

© **Agilent Technologies, Inc. 1999, 2010**

Agilent Technologies
679 Springvale Road
Mulgrave, VIC 3170