

Lamp Ignition Failed

The lamp failed to ignite.

The processor monitors the lamp current during the ignition cycle. If the lamp current does not rise above the lower limit within 2 – 5 seconds, the error message is generated.

Probable Causes

- Lamp not connected.
- Defective lamp.
- Defective VWM board.
- Defective power supply.

Suggested Actions

- Ensure the lamp is connected.
- Exchange the lamp.
- Exchange the VWM board.
- Exchange the power supply.