

CE

TriScroll™ 300 Inverter Dry Scroll Vacuum Pump

INSTALLATION AND OPERATION MANUAL

Manual No. 699904355 Revision C October 2009

TriScroll[™] 300 Inverter Dry Scroll Vacuum Pump




TriScroll is a trademark of Agilent, Inc.

Table of Contents

Declaration of Conformity


Warranty	viii
Warranty Replacement and Adjustment	
Instructions for Use	1
General Information	
Storage	1
Unpacking and Inspection	
Installation Requirements	
Safety	
Operation	4
Startup Procedure	
Shutdown Procedure	
Maintenance	
Technical Information	5
Pump Electrical Controller	
Technical Specifications	
Serial Interface Specification RS485 and RS232	
Gas Ballast	
Bearing Purge	
Purge Kit	
Isolation Valve Kit	
CT-100 Speed Control Kit	
VPI and CT100 Speed Control Kit	
Exhaust Silencer Kit	
Vibration Isolation Kit	16
HEPA Inlet filter	16
Troubleshooting	17
Maintenance	18
General Information	18
Related TriScroll Manuals	18
Maintenance and Tooling Kits	19
Factory Service Options	20
Accessories	
Contacting Agilent	20



List of Figures

List of Tables

Figure	Caption Page	ge	Table	Title	Page
1	Interface Drawing with Dimensions	. 6	1	Power Cord Selection	3
2	Pumping Speed Curves		2	Circuit Breaker Requirements	3
3	TriScroll 300 Inverter Vacuum Pump		3	Specifications	
4	Inverter Interface		4	P1 Interlock	
5	Driving Frequency vs. Analog Input	. 9	5	J2-Serial Port	
6	T+ Pumps List		6	T-Plus Software Variables	
7	T-Unknown Pump		7	Status LEDs	9
8	Isolation Valve Position		8	Troubleshooting Chart	11
9	Pumping Speed Percentage Drop	14	9	Other Related Manuals	
10	VPI and CT100 Kit		10	Maintenance and Tooling Kits	
11	Serial Number Location	15	11	Factory Service Options	
			12	Accessories	



Declaration of Conformity Konformitätserklärung Déclaration de Conformité Declaración de Conformidad Verklaring de Overeenstemming Dichiarazione di Conformità



We Wir

Nous Agilent, Inc.

Nosotros 121 Hartwell Avenue

Lexington, MA, 02421-3133 USA

Wij Noi

declare under our sole responsibility that the product, erklären, in alleniniger Verantwortung, daß dieses Produkt, déclarons sous notre seule responsabilité que le produit, declaramos, bajo nuestra sola responsabilidad, que el producto, verklaren onder onze verantwoordelijkheid, dat het product, dichiariamo sotto nostra unica responsabilità, che il prodotto,

TriScroll Inverter Vacuum Pumps (PTS03001INV, PSS06001INV)

to which this declaration relates is in conformity with the following standard(s) or other normative documents. auf das sich diese Erklärung bezieht, mit der/den flogenden Norm(en) oder Richtlinie(n) übereinstimmt. auquel se réfère cette déclaration est conforme à la (auz) norme(s) ou au(x) document(s) normatif(s). al que se refiere esta declaración es conforme a la(s) norma(s) u otro(s) documento(s) normativo(s). waamaar deze verklaring verwijst, aan de volende norm(en) of richtlijn(en) beantwoodt. a cui se rifersce questa dichiarazione è conforme alla/e sequente/l norma/o documento/l normativo/i.

98/37/EEC, Machinery Directive

EN 1012-2:1996 Compressors and vacuum pumps safety regmts; Part 2 vacuum pumps

EN 1050:1996 Safety of machinery - principles for risk assessment

EN 60204-1 Electrical equipment of industrial machines; general requirements

73/023/EEC, Low Voltage Directive

EN 60034 part 1 Rotating electrical machines - Part 1: Rating and performance

EN 61010-1:2001 Safety requirements for electrical equipment for measurement, control and

laboratory use

89/336/EEC, Electromagnetic Compatibility Directive

John Ehmann

EN 61000-4-2 Testing and measurement techniques - Electrostatic discharge immunity test

EN 61326:1997/A3:2003 Electrical equipment for measurement, control and laboratory use

John Ehmam

Operations Manager

Agilent, Inc.

Vacuum Products Division Lexington, Massachusetts, USA

March 2003

Warranty

Products manufactured by Seller are warranted against defects in materials and workmanship for twelve (12) months from date of shipment thereof to Customer, and Seller's liability under valid warranty claims is limited, at the option of Seller, to repair, to replace, or refund of an equitable portion of the purchase price of the Product. Items expendable in normal use are not covered by this warranty. All warranty replacement or repair of parts shall be limited to equipment malfunctions which, in the sole opinion of Seller, are due or traceable to defects in original materials or workmanship. All obligations of Seller under this warranty shall cease in the event of abuse, accident, alteration, misuse, or neglect of the equipment. In-warranty repaired or replaced parts are warranted only for the remaining unexpired portion of the original warranty period applicable to the repaired or replaced parts. After expiration of the applicable warranty period, Customer shall be charged at the then current prices for parts, labor, and transportation.

Reasonable care must be used to avoid hazards. Seller expressly disclaims responsibility for loss or damage caused by use of its Products other than in accordance with proper operating procedures.

Except as stated herein, Seller makes no warranty, express or implied (either in fact or by operation of law), statutory or otherwise; and, except as stated herein, Seller shall have no liability under any warranty, express or implied (either in fact or by operation of law), statutory or otherwise. Statements made by any person, including representatives of Seller, which are inconsistent or in conflict with the terms of this warranty shall not be binding upon Seller unless reduced to writing and approved by an officer of Seller.

Warranty Replacement and Adjustment

All claims under warranty must be made promptly after occurrence of circumstances giving rise thereto, and must be received within the applicable warranty period by Seller or its authorized representative. Such claims should include the Product serial number, the date of shipment, and a full description of the circumstances giving rise to the claim. Before any Products are returned for repair and/or adjustment, written authorization from Seller or its authorized representative for the return and instructions as to how and where these Products should be returned must be obtained. Any Product returned to Seller for examination shall be prepaid via the means of transportation indicated as acceptable by Seller. Seller reserves the right to reject any warranty claim not promptly reported and any warranty claim on any item that has been altered or has been returned by non-acceptable means of transportation. When any Product is returned for examination and inspection, or for any other reason, Customer shall be responsible for all damage resulting from improper packing or handling, and for loss in transit, notwithstanding any defect or non-conformity in the Product. In all cases, Seller has the sole responsibility for determining the cause and nature of failure, and Seller's determination with regard thereto shall be final.

If it is found that Seller's Product has been returned without cause and is still serviceable, Customer will be notified and the Product returned at its expense; in addition, a charge for testing and examination may be made on Products so returned.

3/1/00

Instructions for Use

General Information

This equipment is designed for use by professionals. The user should read this instruction manual and any other additional information supplied by Agilent before operating the equipment. Agilent will not be held responsible for any events that occur due to non-compliance with these instructions, improper use by untrained persons, non-authorized interference with the equipment, or any action contrary to that provided for by specific national standards.

The TriScroll™ 300 is a dry, scroll vacuum pump. This pump is suitable for pumping air or inert gases. The pump is not intended to pump toxic, corrosive, explosive, or particulate-forming gases.

The following paragraphs contain all the information necessary to guarantee the safety of the operator when using the equipment. Detailed information is supplied in "Technical Information" on page 5.

This manual uses the following standard safety protocol:

WARNING



The warning messages are for attracting the attention of the operator to a particular procedure or practice which, if not followed correctly, could lead to serious injury.

CAUTION



The caution messages are displayed before procedures, which if not followed, could cause damage to the equipment.

NOTE



The notes contain important information taken from the text.

Storage

When transporting and storing the pump, the following environmental requirements should not be exceeded:

Temperature: -20 °C to 60 °C (-4 °F to 140 °F)

Relative humidity: 0 to 95% (non-condensing)

Unpacking and Inspection

The shipping container is a double carton.

- 1. After opening the outer box, remove the foam packing.
- 2. Slit open the inner box.
- 3. Lift the pump with the plywood base out of the inner box.
- 4. Remove the four bolts securing the pump frame to the plywood base.
- 5. Locate the NW16 exhaust fitting and set it aside.
- 6. Inspect the pump for damage.
 If there is shipping damage, contact the freight carrier and your local Agilent sales office immediately.
- 7. Save the carton and packing materials.

Total weight of the package, including the pump, is approximately 33.6 kg (74 lbs).

WARNING



When unpacking the pump, be sure not to drop it, and avoid any kind of sudden impact or shock vibration to it.

WARNING



The TriScroll 300 weighs 26 kg (57 lbs). To avoid injury, use proper lifting techniques when moving the pump.

NOTE



Normal exposure to the environment cannot damage the pump. Nevertheless, it is advisable to keep the pump inlet closed until the pump is installed in the system.

Installation Requirements

Safety

Do not remove or modify any safety or insulating equipment from the pump. To do so may create a serious safety hazard and may void the warranty.

WARNING



- ☐ This pump is designed to pump air and inert gases only; it is not designed to pump explosive, flammable, toxic, or corrosive gases. They can cause bodily injury, explosion, or fire.
- ☐ Install in an area that is not exposed to rain, steam, or excessive humidity. They can cause electric shock, short circuits, and severe bodily injury.
- ☐ Before inspecting or servicing the pump, be sure the electrical supply is disconnected.
- ☐ Consult a qualified electrician whenever wiring the pump.

CAUTION



Although the pump can pump trace particulates normally found in the atmosphere, it is not designed for process solids, chemicals, powders, solvents, condensates, or other particulates. They can damage the equipment, degrade its performance, or shorten its useful life.

Single and three phase pumps operate in a clockwise direction when viewed from the motor end. (Note the arrow on the pump frame.) Improper rotation can cause permanent damage to the pump.

During operation, the following environmental conditions should not be exceeded:

Temperature: +5 °C to +40 °C (+41 °F to +104 °F)

Relative humidity: 0 to 95% (non-condensing)

CAUTION



Do not block the fan ducts because the pump can become overheated. A pump surface temperature in excess of 55 °C (131 °F) is potentially damaging. If such conditions are observed, turn pump off and allow to cool. Disassemble, inspect for damage, and repair if necessary.

CAUTION



To reduce the risk of electric shock, do not expose to rain; store indoors.

Power Cord

Several power cord options are available from your Agilent dealer. Descriptions of the available power cords and their ordering numbers are given in Table 1.

NOTE



The pump must be connected to the power supply using a high voltage IEC-320 type power cord of at least 10 A capacity.

Table 1 Power Cord Selection

Country	Power Cord Specification	Order
Europe	10 A / 220-230 VAC, 2.5 m	656494220
Denmark	10 A / 220-230 VAC, 2.5 m	656494225
Switzerland	10 A / 230 VAC, 2.5 m	656494235
UK/Ireland	13 A / 230 VAC, 2.5 m	656494250
India	10 A / 220-250 VAC, 2.5 m	656494245
Israel	10 A / 230 VAC, 2.5 m	656494230
North America	10 A / 230 VAC, 2.5 m	656494255

Grounding Instructions

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This pump is equipped with a power cord that has a grounding wire with an appropriate grounding plug. The plug must be inserted into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING



Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if you are in doubt as to whether the product is properly grounded.

Do not modify the plug provided; if it does not fit the outlet, have the proper outlet installed by a qualified electrician.

Connect the product only to an outlet that has the same configuration as the plug.

Do not use an adapter with this product.

Extension Cords

If you must use an extension cord with this product:

- ☐ Agilent recommends using only extension cords with a minimum of 16-gauge wire and a maximum length of 25′ (7.6 m).
- ☐ Use only a 3-wire extension cord that accepts the plug.
- ☐ Ensure the extension is in good condition.

Ensure the extension cord is rated high enough to carry the current the products draws. An undersized cord causes a drop in line voltage, resulting in loss of power and overheating.

Circuit Breakers

WARNING



Protect against short circuits by installing a circuit breaker of the proper capacity.

Table 2 lists the circuit breaker capacity required for the pump. Locate the switch or circuit breaker near the pump.

Table 2 Circuit Breaker Requirements

PTS03001INV	200-240 VAC 50/60 Hz	100-115 VAC 50/60 Hz*
Breaker capacity	10 A	20 A

^{*} Inverter with P/N S4897001 only

Operation

In order to reach ultimate vacuum, the pump must be left running for about one hour with the inlet sealed.

Unlike conventional oil-sealed pumps, Agilent's dry scroll pumps do not have fluid to cleanse them of accumulated dust and debris. Run the pump periodically at atmosphere for a minute or two to flush out the pump. Flush the pump regularly and adjust this schedule according to your specific conditions.

Startup Procedure

- Be sure that the vacuum system isolation valve is
- Turn on power to the pump.

NOTE



Pump operation is interlock dependent. The provided mating connector must be plugged into P1 to start the pump.

NOTE



When the controller is switched on, an electronic self-test occurs, during which an orange LED illuminates for one second and the turns off for two seconds. During this time, the pump will not start.

This self-test time is not required if the pump is already powered, as when remotely or serially operated.

3. Open the isolation valve.

Shutdown Procedure

- 1. Close the vacuum system isolation valve. This prevents debris in pump from being transported into the vacuum system.
- Turn off power to the pump.

Maintenance

Personnel responsible for pump operation and maintenance must be well-trained and aware of the accident prevention rules.

WARNING



- ☐ Death may result from contact with high voltages. Always take extreme care and observe the accident prevention regulations in force.
- ☐ When the machine is powered up, be careful of moving parts and high voltages.
- ☐ If you have to perform maintenance on the pump after a considerable time in operation, allow the pump to cool as the temperature of the outer surface may be in excess of 55 °C (131 °F).
- ☐ Always disconnect your power supply to the pump before beginning maintenance work.

NOTE



Before returning the pump to the factory for repair, the "Health and Safety" sheet attached to this instruction manual must be completed and sent to the local sales office. A copy of the sheet must be inserted in the pump package before shipping.

If a pump is to be discarded, it must be disposed of in accordance with specific national and local standards.

Technical Information

Table 3 Specifications

Model	TriScroll™ 300 Inverter Dry Scroll Vacuum Pump (PTS03001INV)
Interface dimensions	See Figure 1 on page 6
Peak pumping speed	250 l/m, 15m ³ /hr (8.9 cfm) See Figure 2
Media	Clean air. No toxic, corrosive, explosive or particulate forming gases
Ultimate pressure (Torr)	1.0×10^{-2} Torr (1.3 x 10^{-2} mbar)
Maximum inlet pressure	1.0 atmosphere (0 psig)
Maximum outlet pressure	1.1 atmosphere (1.5 psig)
Inlet connection	NW25
Exhaust connection	Female 1/4" National Pipe Thread (NW16 adapter provided)
Gas ballast	Female 1/4" National Pipe Thread (40 Micron sintered filter provided)
Ambient operating temperature	5 °C to 40 °C (41 °F to 104 °F)
Storage temperature	-20 °C to 60 °C (-4 °F to 140 °F)
Motor rating	0.67 HP (0.5 kW)
Operating voltage	50-60 Hz:200-240 VAC Single-phase / 100-120 VAC Single Phase* ±10%
	*Inverter with P/N of S4897001 ONLY
Motor line current	200 VAC; 5 A 240 VAC; 4.2 A
Motor thermal protection	Automatic
Operating speed	35-65 Hz Factory setting: 62 Hz, 1800 RPM
Cooling system	Air-cooled
Weight	Pump only: 26 kg (57 lbs) Shipping weight: 33.6 kg (74 lbs)
Noise level (per ISO 11201)	Variable with frequency, 55-68 dB(A)
Vibration level at inlet (per ISO 10816-1)	Variable with frequency
Main fuse	Type H; 10 A, 250 V (Littlefuse 0216010.HxP or equivalent)
Installation and storage	Installation category 2, indoor usage and storage
Pollution degree	2
CSA/CUS compliance	CAN/CSA-C22.2 No. 61010-1-04 U/L 61010-1, second edition
Altitude	2000 m

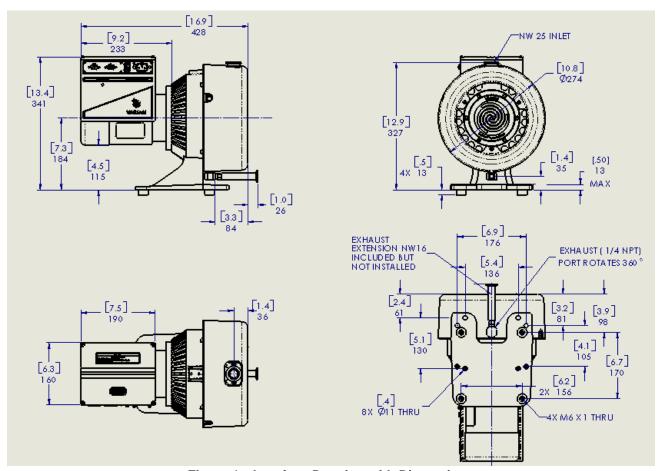


Figure 1 Interface Drawing with Dimensions

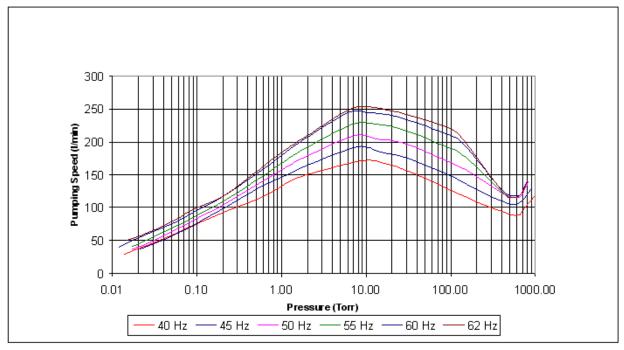


Figure 2 Pumping Speed Curves





Figure 3 TriScroll 300 Inverter Vacuum Pump

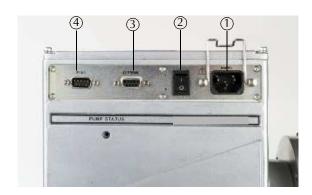


Figure 4 Inverter Interface

- 1. Cowling Screws; M5 (3)
- 2. Cowling
- 3. Inlet (NW25)
- 4. Inlet Screen
- 5. NW16 Exhaust Adapter (Not shown)
- 6. Bearing Purge Port (1/4" National Pipe Thread)
- 7. Pump Frame
- 8. Frame Screws; M6 (4)
- 9. Gas Ballast Port (1/4" National Pipe Thread)
- 10. Mounting Holes; 11 mm diameter thru (8)
- 11. Rubber Feet (4)

- 1. Power Connector (IEC 320)
- 2. On/Off Switch
- 3. Serial Port J2
- 4. Interlock Port P1

Pump Electrical Controller

The pump is powered by an inverter that converts single phase line power into 3-phase power that drives an induction motor at a user selectable frequency.

Several operational variables are modifiable through the J2 serial port when using Agilent T-Plus software. A number of additional system variables are also viewable. Pump operation is interlocked through the P1 connector. Pins 4 and 5, and Pins 8 and 9, must be connected together to enable operation. A prewired connector is supplied with the pump and should be plugged into P1.

If the pump requires more than 750 Watts to run at the set frequency, the pump will be power limited and the output frequency will be reduced. This mode is known as autotuning.

At pump start, the drive frequency is ramped up over several seconds. This provides for smooth starting and eliminates large in-rush currents.

Technical Specifications

- ☐ Input voltage: 200 -240 V/100-120 V*, 50 60 Hz
 - * Inverter with P/N S4897001 only
- ☐ Max frequency: 65 Hz, factory set @ 62Hz
- □ Normal Operation maximum power: 750 W
- ☐ Protection level: IP 20

Table 4 P1 Interlock

PIN #	SIGNAL NAME	IN/OUT
1	VPI relay contact 1	Out
2	0-10 V remote control	In
3	No Connection	
4	Start (-) - Connect to Pin 5	In

Table 4 P1 Interlock

PIN #	SIGNAL NAME	IN/OUT
5	Groundout	Out
6	VPI relay contact 2	Out
7	No Connection	
8	Start (+) - Connect to Pin 9	In
9	24 V	Out

Remote speed setting allows you to control rotational speed using a 0-10 V analog input:

- □ V_{in} > 9 V: Driving frequency will be the full speed (factory set @62 Hz)
- □ V_{in} <1 V: Driving frequency will be the minimum speed (35 Hz)

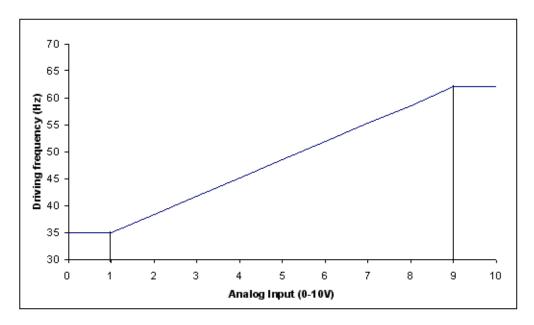


Figure 5 Driving Frequency vs. Analog Input

NOTE

Pump operation is interlock dependent. The provided mating connector must be plugged into P1 to start the pump.

Serial Interface Specification RS485 and RS232

Table 5 J2 - Serial Port

PIN #	SIGNAL NAME
1	+ 5 V out
2	TX (RS232)
3	RX (RS232)
4	Spare
5	GND
6	A+ (RS485)
7	Spare
8	B- (RS485)
9	Spare

Physical level: RS232 or RS485

Maximum baud: 9600, 8 data bit, no parity, 1 stop bit.

Table 6 T-Plus Software Variables

WIN	ТҮРЕ	DESCRIPTION	
000	Logical	Start/Stop (1=START; 0=STOP)	
001	Logical	Low Speed [0=OFF / 1=ON]	
800	Logical	Remote/Serial Configuration (1=REMOTE; 0=SERIAL)	
102	Numerical	Set Point Value (Hz)	
105	Numerical	Set Point Hysteresis(%) [0-100]	
108	Numerical	Baud Rate (0-4) [600-1200-2400-4200-9600]	
117	Numerical	Low Speed Adjust (Hz)	
120	Numerical	Rotational Frequency Setting [Hz] (High speed adjust)	
200	Numerical	Bus Current [mA]	
201	Numerical	3 Phase Voltage [Vrms]	
202	Numerical	Power [W]	
203	Numerical	Driving Frequency [Hz]: (current driving frequency)	
205	Numerical	Status: □ 0=stop □ 2=ramp □ 3=autotuning □ 5=normal □ 6=fail	

Table 6 T-Plus Software Variables (Continued)

WIN	TYPE	DESCRIPTION
206	Numerical	Error Code:
		 □ Bit 7: motor block □ Bit 6: short circuit □ Bit 5: undervoltage □ Bit 4: spare □ Bit 3: power fail □ Bit 2: controller overt □ Bit 1: pump overt □ Bit 0: spare
211	Numerical	Controller Temperature [°C]
216	Numerical	Environment Temperature [°C]
300	Numerical	Cycle Time [min]
301	Numerical	Cycle Number
302	Numerical	Pump Life [h]
319	Alphanumeric	Controller Model
323	Alphanumeric	Controller Serial Number
325	Alphanumeric	Electrical Modification Level
500	Logical	Monitor Mode (write only)
503	Numerical	RS485 Serial Address Setting [0-31]
504	Logical	Serial Type Select (0=RS323; 1=RS485)

Table 7 Status LEDs

LED STATUS	CONTROLLER STATUS
Off	Stop
Green flashing	Ramp or Autotuning
Green	Normal Operation
Red	Fail
Orange + Off	Reset + selftest

NOTE



When the controller is switched on, an electronic self-test occurs, during which an orange LED illuminates for one second and the turns off for two seconds. During this time, the pump will not start.

This self-test time is not required if the pump is already powered, as when remotely or serially operated.

Using T-Plus Software To Change The Target Frequency

- 1. Install T-Plus software on your PC by running setup.exe.
- 2. Using a 9-pin serial cable, connect your PC to the J2 serial port on the inverter (Figure 4).
- 3. Start the pump using the On/Off switch. The provided Interlock Connector must be installed in P1.
- 4. Start the T-Plus software and Figure 6 appears.




Figure 6 T+ Pumps List

5. Click **Open Control Panel** and Figure 7 appears.

Open the Speed Settings directory, and click Target Frequency.

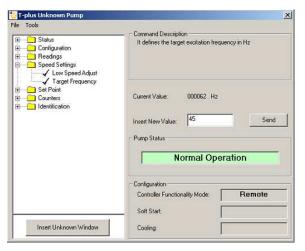


Figure 7 T-Unknown Pump

- 7. Enter the desired operating frequency into *Insert New Value*. This must be an integer between *35* and *65*.
- 8. Click **Send**. The pump immediately tries to change to the new target frequency. If the pump requires more than 750 Watts to attain the target frequency, the pump is power limited and will run at a lower frequency (auto-tuning mode). This condition will continue until the power required drops below 750 Watts.

The target frequency is stored in the inverter even when power to the pump is removed.

Gas Ballast

The pump incorporates an automatic gas ballast to prevent water and other condensates from accumulating within the pump. The standard configuration is a sintered filter installed in the 1/4" National Pipe Thread gas ballast port (item 9 on Figure 3 on page 7). This allows enough atmospheric air to enter the pump in order to purge condensates while not effecting pump ultimate pressure or pumping speed.

For applications where the ingress of atmospheric air is undesirable, dry nitrogen at a flow rate of ≈5 lpm can be bled into the gas ballast port. See "Purge Kit" below. Blocking of the gas ballast port is not recommended.

Bearing Purge

A 1/4" National Pipe Thread bearing purge port (item 6 on Figure 3 on page 7) protects the main crankshaft bearings in applications where large amounts of water are being pumped. In the standard configuration, this port is sealed. To enable the bearing purge, dry nitrogen at a flow rate of ≈5 lpm can be bled into the bearing purge port. This gas supply should be maintained at 2 psig or less and must be kept below 5 psig. See "Purge Kit" below.

Purge Kit

A purge kit (Agilent part number PTSPURGEKIT) to properly purge either the bearing purge or the gas ballast is available. This kit contains a flow meter and all necessary valving and tubing.

Isolation Valve Kit

Scroll pumps return to atmospheric pressure quickly when shut off. Thus, the installation of a fast acting, automatic, normally closed isolation valve is strongly recommended to prevent pump debris from being transported back into the vacuum chamber when the pump is turned off:

- ☐ The opening of this valve must occur \ge 350 ms after pump startup.
- □ Valve closing must occur ≤ 250 ms after pump shut off.

Use an NW25 or an NW40 valve and mount it as close as possible to the pump inlet. Mounting to the pump inlet is ideal.

Agilent offers a variety of manual, electromagnetic and electropneumatic controlled vacuum valves for vacuum applications. The Agilent Vacuum Pump Isolation (VPI) Valve is highly recommended for vacuum pump isolation applications (Figure 8).

When used with the TriScroll inverter pump, the VPI Valve status is controlled by motor operation. The VPI Valve:

- Opens when the pump is running and
- ☐ Closes when it is stopped due to switch off or overload protection.

This VPI kit includes a 24 VDC VPI valve, a communication cable, a 24 VDC power supply, and a splitter cord. The order numbers for NW25 and NW40 inlets are VPI25INV24DC and VPI40INV24DC, respectively.



Use the provided VPI valve kit only with Agilent TriScroll inverter pumps using inverters with part numbers \$4896001Z and/or \$4897001.

See manual (P/N 699912117) for installation details.



Figure 8 Isolation Valve Position

CT-100 Speed Control Kit

Agilent offers an optional speed control kit (P/N#: PTSCNTRLKIT1 for an NW25 port, and PTSCNTRLKIT2 for an NW40) for use with the TriScroll inverter pumps (P/N#: TS0X00INVXX), which allows automatic switching from full pumping speed to a lower speed. Operation at lower speed reduces noise and can extend maintenance intervals.

This speed control kit consists of a CT-100 Active Rough Vacuum Gauge, a communication cable, a 24 VDC power supply, a power splitter cord, a tee, a centering ring, and a clamp.

Two set points can be set on the CT100 gauge. When the pressure is:

☐ Over the high set point (SP1), the inverter drives the pump at full speed*.

- ☐ Below the lower set point value (SP2), the scroll is driven at minimum speed**.
- ☐ Higher than set point 2, but lower than set point 1, the driving frequency is: (full speed +minimum speed)/2.

Set points are user-selected. For a faster pumpdown, lower SP1 and the pump can stay longer at full speed. For quieter operation, increasing SP2 and the pump runs longer at the lower frequency.

- * Full speed: customized frequency setting via Agilent T-plus software if used. Factory setting is 62 Hz.
- ** Minimum speed: 35 Hz

Pumping speed changes compared with factory setting, but the effect is less at lower inlet pressures. Figure 9 shows the pumping speed percentage drop at peak pumping speed and at 100 mTorr inlet pressure.

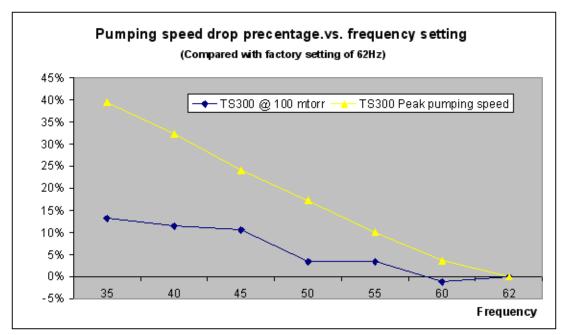


Figure 9 Pumping Speed Percentage Drop

Please refer to manual (P/N 699904375) for installation and operation details.

VPI and CT100 Speed Control Kit

Agilent's combination VPI and CT100 speed control kit (Agilent P/N PTSCNTRLKIT3 for NW25 and PTSCNTRLKIT4 for NW40), consists of the CT-100 Active Rough Vacuum Gauge, Communication Cable, 24 VDC Power Supply, Power Splitter Cord, Tee, Centering Ring(s), Clamp(s), and a VPI valve (Figure 10).



Figure 10 VPI and CT100 Kit

For the speed control kit with a VPI valve, the pump inverter serial number starts with an A (Figure 11).



Figure 11 Serial Number Location

Refer to manual (P/N 699904375) for installation and operation details.

Exhaust Silencer Kit

In certain applications it is desired to lower the noise level emitted by the pump. For these cases, Agilent offers Exhaust Silencer Kits (P/N EXSLRTRISCROLL, Manual P/N: 699904380), which breaks up noise pulsation in the discharge line.

The Exhaust Silencer Kits contain two basic components, as well as installation hardware. A cylindrical resonator chamber has been selected to attenuate the frequencies associated with the exhaust gas pulsation noise. The resonator is then plumbed to an exhaust muffler/filter. This muffler provides the majority of the actual noise reduction. It also contains an integral 5-micron paper filter element to capture any tip seal debris. This paper filter is replaceable; the recommended service interval is whenever the pump tip seal or module maintenance is performed.

Replacement polyester filter element rated 99% efficient at the 5-micron particle size, P/N: REPLSLR FILTER,

Vibration Isolation Kit

A set of vibration isolation mounts (P/N PTSVIBISOKIT, Manual P/N: 699904385) are available for Agilent scroll pumps. These are used in place of the standard feet installed on the pump for applications that require minimal vibration transmission from the pump to the installation. They can be used alone, or with inlet flexible bellows to provide pump isolation.

The vibration isolation mounts in the Vibration Isolation Kit have been designed to ensure the lowest vibration level transmitted at the base of the pump.

Vibration level in every direction (axis), transmitted to the surface the pump sits on, is reduced by a significant amount. Typical vibration reduction levels are 86% for the TriScroll 300 pump.

The TriScroll Vibration Isolation Kit consists of (4) vibration isolation mounts. They have a M6 metric threaded screw to attach to the TriScroll frame; the screw is provided.

These mounts increase the height of the TriScroll pumps by 0.75" compared to the standard mounting feet.

HEPA Inlet filter

Agilent now offers inlet filters for the scroll pumps, which protect the pump from ingested particles, and keep particles from migrating out of the pump. These HEPA filters provide a rated 99.97% efficiency in trapping particles > 0.3 microns.

NW 25 Inlet Trap with HEPA filter insert: P/N#: #SCRINTRPNW25.

Replacement HEPA filter element (NW25 or NW40):

P/N#: # RPLHEPAFILTER1.

Troubleshooting

Table 8 contains a list of possible problems, their probable causes, and corrective actions.

Table 8 Troubleshooting Chart

Problem	Probable Cause	Corrective Action
Pump won't start	P1 interlock missing	Plug in connector (provided).
	Wrong input voltage	Plug inverter into 200-240 VAC 50/60 Hz
	Circuit breaker open	Close breaker. Identify cause of overload.
	Motor thermal protector open	Allow motor to cool. Identify cause of overload.
	Main fuse open	Inspect and replace fuse (Type H, 10 A, 250 V (Littlefuse 0216010.HxP or equivalent)).
	Wiring loose or cut	Repair or replace.
	Excessive voltage drop	Check size and length of power supply cable.
	Defective motor	Inspect. Contact Agilent.
Poor ultimate pressure	System leak	Locate and repair leak.
	Water in pump	Flush pump with air or dry nitrogen.
	Gas ballast plugged	Replace breather vent. Contact Agilent.
	Solvent in pump	Flush pump with air or dry nitrogen. Install trap or filter.
	Seals worn out	Replace tip seals. (Table 10 and Table 11 on page 19 list maintenance kits and service options.)
	Poor conductance to pump	Replumb with shorter and/or larger diameter tubing.
Pump makes hammering noise	Pump overheated	Check ambient temperature. Check ventilation to pump.
	Debris in pump	Check inlet screen. Flush pump. Disassemble pump and inspect. (Table 10 and Table 11 on page 19 list maintenance kits and service options.)

Maintenance

General Information

Agilent TriScroll 300 Inverter pumps are designed to provide years of trouble-free service if maintenance procedures and intervals are observed. Bearing grease replenishment and tip seal replacement is recommended when pump base pressure has risen to an unacceptably high level for your application. Bearings, rotary seals and o-rings should also be replaced if the pump exhibits humming or grinding noises from the bearings. Main bearing life may be shortened if your application requires the pumping of high quantities of water vapor. Use of the bearing purge kit (PTSPURGEKIT) mentioned earlier will keep this water from impacting bearing life.

Maintenance should be performed in accordance with procedures, tooling and materials specified in the manuals listed below.

Related TriScroll Manuals

Other manuals related to tip seal replacement, pump module replacement, and major maintenance of the TriScroll 300 Inverter pumps are listed in Table 9.

Table 9 Other Related Manuals

Title	Applicable TriScroll Model	Part Number
Tip Seal Replacement Manual	All TriScroll 300 Series models	699904280
Pump Module Replacement Manual	All TriScroll 300 Series models	699904285
Major Maintenance Manual	All TriScroll 300 Series models	699904260

Maintenance and Tooling Kits

Material and tooling required to perform maintenance on TriScroll pumps is provided in kit form. A description of each kit and ordering information is provided in Table 10.

Table 10 Maintenance and Tooling Kits

Description	Contents	Applicable TriScroll Model	Part Number
Major Maintenance Kit	All bearings, bearing seals, bearing lubricant, O-rings, and tip seals required to rebuild TriScroll 300 series pumps.	All TriScroll 300 Series models	PTSS0300MK
Maintenance Tool Kit	All fixtures and tools required to perform any maintenance on TriScroll 300 Series pumps.	All TriScroll 300 Series models	PTSS0300TK
Tip Seal Tool Kit	All tools required to change the tip seals on the TriScroll 300 Series pumps.	All TriScroll 300 Series models	PTSTSTKIT
Replacement Tip Seal Set	Replacement tip seals and static O-rings for TriScroll 300 Series pumps.	All TriScroll 300 Series models	PTSS0300TS





After tip seal replacement, the TriScroll 300 Inverter pump may require up to 24 hours run time to achieve full rotational speed.

Factory Service Options

Table 11 lists the service options that Agilent offers for the TriScroll 300 Inverter pump.

Table 11 Factory Service Options

Factory Service Options	Part Number
Advance Exchange TriScroll 300 Pump Module Only	EXPTS0300SC
Service/Rebuild TriScroll 300 Inverter Pump	PTS0300KMA

Accessories

The accessories listed in Table 12 are available for use with the TriScroll 300 Inverter pump. Contact your local Agilent office to place an order. A list of offices is included on the rear cover of this manual.

Table 12 Accessories

Purge Kit	PTSPURGEKIT
Exhaust Extension	S4707002
Exhaust Filter Kit	PTS300EXFIL
Isolation Valve Kit	VPI25INV24DC
CT100 Speed Control Kit	PTSCNTRLKIT1
Exhaust Silencer Kit	EXSLRTRISCROLL
Vibration Isolation Kit	PTSVIBISOKIT
HEPA Inlet Filters	SCRINTRPNW25

Contacting Agilent

In the United States, you can contact Agilent Customer Service at 1-800-882-7426. See the back cover of this manual for a listing of our sales and service offices.

Visit our web site at: http://www.chem.agilent.com/en-US/Products/Instruments/vacuum/pages/default.aspx.



Vacuum Products Division Instructions for returning products

Dear Customer:

Please follow these instructions whenever one of our products needs to be returned.

- 1) Complete the attached Request for Return form and send it to Agilent Technologies (see below), taking particular care to identify all products that have pumped or been exposed to any toxic or hazardous materials.
- 2) After evaluating the information, Agilent Technologies will provide you with a Return Authorization (RA) number via email or fax, as requested.

Note: Depending on the type of return, a Purchase Order may be required at the time the Request for Return is submitted. We will quote any necessary services (evaluation, repair, special cleaning, eg).

- 3) Important steps for the shipment of returning product:
 - Remove all accessories from the core product (e.g. inlet screens, vent valves).
 - Prior to shipment, drain any oils or other liquids, purge or flush all gasses, and wipe off any excess residue.
 - If ordering an Advance Exchange product, <u>please use the packaging from the Advance Exchange to return the defective</u> product.
 - Seal the product in a plastic bag, and package product carefully to avoid damage in transit. You are responsible for loss or damage in transit.
 - Agilent Technologies is not responsible for returning customer provided packaging or containers.
 - Clearly label package with RA number. Using the shipping label provided will ensure the proper address and RA number
 are on the package. Packages shipped to Agilent without a RA clearly written on the outside cannot be accepted and will
 be returned.
- 4) Return only products for which the RA was issued.
- 5) Product being returned under a RA must be received within 15 business days.
- 6) Ship to the location specified on the printable label, which will be sent, along with the RA number, as soon as we have received all of the required information. Customer is responsible for freight charges on returning product.
- 7) Return shipments must comply with all applicable **Shipping Regulations** (IATA, DOT, etc.) and carrier requirements.

RETURN THE COMPLETED **REQUEST FOR RETURN** FORM TO YOUR NEAREST LOCATION:

 Fax:
 00 39 011 9979 330

 Fax Free:
 00 800 345 345 00
 Fax:
 1 781 860 9252
 please visit our website for individual office information

 Toll Free:
 00 800 234 234 00
 Toll Free: 800 882 7426, Option 3
 office information

 vpt-customercare@agilent.com
 vpl-ra@agilent.com
 http://www.agilent.com



Vacuum Products Division Request for Return Form (Health and Safety Certification)

Please read important policy information on Page 3 that applies to all returns.

Company Name	ATION			
Company Name:		Contact Name:	Contact Name:	
Tel: Email:		Fax:		
Customer Ship To:			Customer Bill To:	
Europe only: VAT re	g. Number:		USA/Canada only: Tax	able Non-taxable
) PRODUCT IDENTIFICA	ATION			
Product Description		Agilent P/N	Agilent S/N	Original Purchasing Reference
RADIOACTIVE MATER Call Agilent Technolog The equipment listed a	RIAL, OR MER gies to discus above (check NOT pumped o pumped or be	CURY AT ITS FACILITY. ss alternatives if this rec t one): or been exposed to any t en exposed to the follow	TS CONTAMINATED WITH BIOLOGI quirement presents a problem. toxic or hazardous materials. OR ving toxic or hazardous materials. If	
	nation must al	so be filled out. Check	boxes for all materials to which prod	_
inform	nation must al Corrosive		boxes for all materials to which prod	_
inform	Corrosive	Reactive Fla	boxes for all materials to which prod	uct(s) pumped or was exposed: Biological Radioactive
inform Toxic C List all toxic/hazardo NOTE: If a product is receive	Corrosive us materials. ed at Agilent while safe handling of	Reactive Flatence Fla	boxes for all materials to which produced ammable Explosive Chemical name, and chemical symbolic or hazardous material that was not disclose	uct(s) pumped or was exposed: Biological Radioactive pol or formula: d, the customer will be held responsible for a
Inform Toxic C List all toxic/hazardo NOTE: If a product is receive costs incurred to ensure the exposure to toxic or hazardo Print Name:	Corrosive us materials. ed at Agilent whi e safe handling of ous materials pre	Reactive Flatence Fla	boxes for all materials to which produced ammable Explosive Chemical name, and chemical symbol ic or hazardous material that was not disclose any harm or injury to Agilent employees as well.	uct(s) pumped or was exposed: Biological Radioactive pol or formula: d, the customer will be held responsible for al ell as to any third party occurring as a result of
Toxic C List all toxic/hazardo NOTE: If a product is receive costs incurred to ensure the exposure to toxic or hazardo Print Name: FAILURE INFORMATION	Corrosive us materials. ed at Agilent whi e safe handling of ous materials pre	Reactive Flater	boxes for all materials to which produced ammable Explosive Chemical name, and chemical symlor ic or hazardous material that was not disclose any harm or injury to Agilent employees as weature:	uct(s) pumped or was exposed: Biological Radioactive pol or formula: d, the customer will be held responsible for al ell as to any third party occurring as a result of
Inform Toxic C List all toxic/hazardo NOTE: If a product is receive costs incurred to ensure the exposure to toxic or hazardo Print Name: FAILURE INFORMATION Failure Mode (REQUIR	Corrosive The state of the sta	Reactive Flater	boxes for all materials to which product ammable Explosive Chemical name, and chemical symlor ic or hazardous material that was not disclose any harm or injury to Agilent employees as wature:	uct(s) pumped or was exposed: Biological Radioactive pol or formula: d, the customer will be held responsible for a ell as to any third party occurring as a result of
Inform Toxic C List all toxic/hazardo NOTE: If a product is receive costs incurred to ensure the exposure to toxic or hazardo Print Name: FAILURE INFORMATION CONTRACTOR CON	Corrosive us materials. ed at Agilent whi e safe handling of ous materials pre ON: ED FIELD. Se f Malfunction	Reactive Flater	boxes for all materials to which product ammable Explosive Chemical name, and chemical symlor ic or hazardous material that was not disclose any harm or injury to Agilent employees as wature:	uct(s) pumped or was exposed: Biological Radioactive pol or formula: d, the customer will be held responsible for al ell as to any third party occurring as a result of



Vacuum Products Division Request for Return Form (Health and Safety Certification)

Please use these Failure Mode to describe the concern about the product on Page 2.

TURBO PUMPS and TURBO CONTROLLERS

APPARENT DEFECT/MALFUNCT	TION	POSITION	PARAMETERS	
- Does not start	- Noise	- Vertical	Power:	Rotational Speed:
- Does not spin freely	- Vibrations	-Horizontal	Current:	Inlet Pressure:
- Does not reach full speed	-Leak	-Upside-down	Temp 1:	Foreline Pressure:
- Mechanical Contact	-Overtemperature	-Other:	Temp 2:	Purge flow:
- Cooling defective	-Clogging		OPERATING TIN	ME:

ION PUMPS/CONTROLLERS

- Bad feedthrough	- Poor vacuum
- Vacuum leak	- High voltage problem
- Error code on display	- Other

LEAK DETECTORS

- Cannot calibrate	-No zero/high backround
- Vacuum system unstable	- Cannot reach test mode
- Failed to start	- Other

SCROLL AND ROTARY VANE PUMPS

- Pump seized	- Other
- Doesn't reach vacuum	- Over temperature
- Pump doesn't start	 Noisy pump (describe)

VALVES/COMPONENTS

- Main seal leak	- Bellows leak
- Solenoid failure	- Damaged flange
- Damaged sealing area	-Other

INSTRUMENTS

- Gauge tube not working	- Display problem
- Communication failure	- Degas not working
- Error code on display	- Other


DIFFUSION PUMPS

- Heater failure	- Electrical problem
- Doesn't reach vacuum	- Cooling coil damage
- Vacuum leak	- Other

Section 6) ADDITIONAL TERMS

Please read the terms and conditions below as they apply to all returns and are in addition to the Agilent Technologies Vacuum Product Division — Products and Services Terms of Sale.

- Customer is responsible for the freight charges for the returning product. Return shipments must comply with all
 applicable Shipping Regulations (IATA, DOT, etc.) and carrier requirements.
- Customers receiving an Advance Exchange product agree to return the defective, rebuildable part to Agilent Technologies
 within 15 business days. Failure to do so, or returning a non-rebuildable part (crashed), will result in an invoice for the
 non-returned/non-rebuildable part.
- Returns for credit toward the purchase of new or refurbished Products are subject to prior Agilent approval and may incur
 a restocking fee. Please reference the original purchase order number.
- Units returned for evaluation will be evaluated, and a quote for repair will be issued. If you choose to have the unit
 repaired, the cost of the evaluation will be deducted from the final repair pricing. A Purchase Order for the final repair price
 should be issued within 3 weeks of quotation date. Units without a Purchase Order for repair will be returned to the
 customer, and the evaluation fee will be invoiced.
- A Special Cleaning fee will apply to all exposed products per Section 4 of this document.
- If requesting a calibration service, units must be functionally capable of being calibrated.

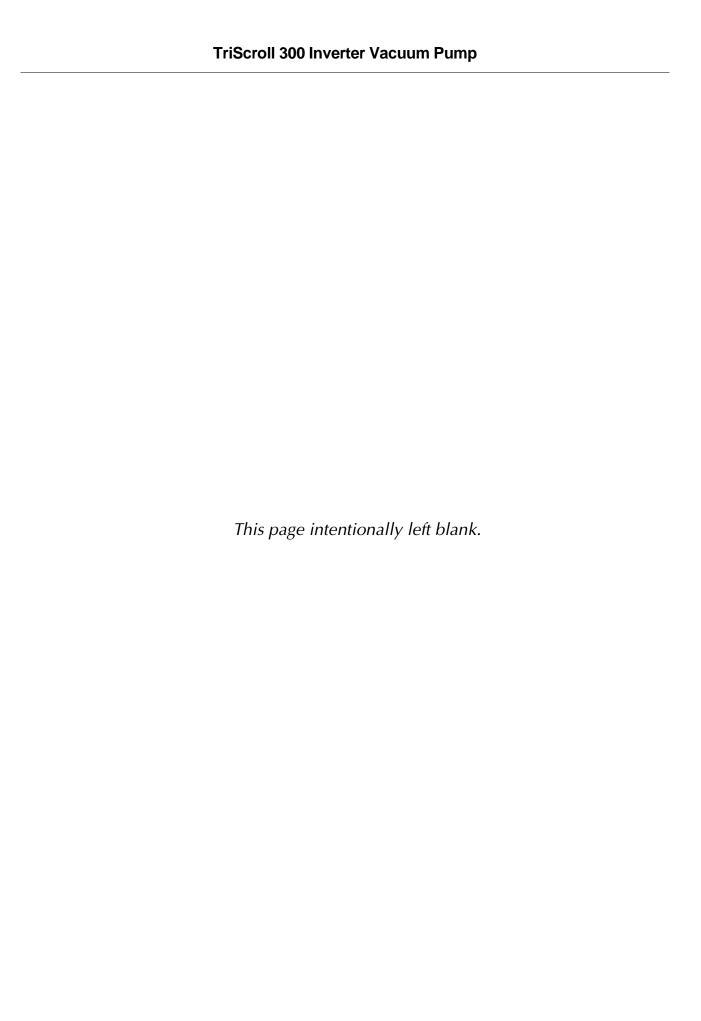

Agilent Technologies

Vacuum Product Division

United States & Canada

Agilent Technologies Vacuum Products Division 121 Hartwell Avenue Lexington, MA 02421 USA Tel: +1 781 861 7200 Toll-Free: +1 800 882 7426

Fax: +1 871 860 5437

Benelux

Agilent Technologies
Vacuum Products Division
Herculesweg 8
4338 PL Middelburg
THE NETHERLANDS
Tel: +31 118 671570
Fax: +31 118 671569

China

Agilent Technologies
Vacuum Products Division
Room 1648
Central Tower South Wing
Beijing Junefield Plaza
No. 10 XuanWuMenWai Street
Beijing 100052 P.R. CHINA
Tel.: +86 (10) 6310 8550
Toll-Free: 800 820 6556
Fax: +86 (10) 6310 0141

France

Agilent Technologies
Vacuum Products Division
7 avenue des Tropiques
Z.A. de Courtaboeuf - B.P. 12
91941 Les Ulis cedex FRANCE
Tel.: +33 (0) 1 69 86 38 84
Fax: +33 (0) 1 69 86 29 88

Germany & Austria

Agilent Technologies
Vacuum Products Division
Alsfelder Strasse 6
Postfach 11 14 35
64289 Darmstadt GERMANY
Tel.: +49 (0) 6151 703 353

Fax: +49 (0) 6151 703 302



India

Agilent Technologies Vacuum Product Division 205-A, "A" wing of Galleria, 2nd floor, Hiranandani Gardens, Powai, Mumbai-400 076, India Tel.: +91 22-2570 8595 / 8597 Fax: +91 22- 2570 8599

Italy

Agilent Technologies
Vacuum Products Division
via F.Ili Varian 54
10040 Leini, (Torino) ITALY
Tel.: +39 011 997 9111
Toll-Free: 00 800 234 234 00
Fax: +39 011 997 9350

Japan

Agilent Technologies
Vacuum Products Division
Sumitomo Shibaura Building 4-16-36
8th Floor
4-16-36 Shibaura Minato-ku
Tokyo 108 JAPAN
Tel.: +81 3 5232 1253
Toll-Free: 0120 655 040
Fax: +81 3 5232 1710

Korea

Agilent Technologies
Vacuum Products Division
Shinsa 2nd Bldg. 2F 966-5
Daechi-dong
Kangnam-gu, Seoul
KOREA 135-280
Tel.: +82 2 3452 2452
Toll-Free: 080 222 2452
Fax: +82 2 3452 2451

Mexico

Agilent Technologies Vacuum Products Division Concepcion Beistegui No 109 Col Del Valle C.P. 03100 MEXICO, D.F.

Tel.: +52 5 523 9465 Fax: +52 5 523 9472

Southeast Asia

Agilent Technologies Vacuum Products Division South East Asia (SEA) - Alex Ho H/P: +601 2213 1253 Fax: +603 6733 8121

Singapore

Agilent Technologies Vacuum Products Division Singapore Unit 10-04 Helios Biopolis @ one-north 11 Biopolis Way, 138667 Singapore

H/P.: +65 92364988 Fax: +65 64789603

Taiwan

Agilent Technologies Vacuum Products Division 14F-6, No. 77, Hsin Tai Wu Road, Sec. 1 Hsi chih, Taipei Hsien, Taiwan, R.O.C.

Tel.: +886 2 2698 9555 Toll Free: 0800 051 342 Fax: +886 2 2698 9678

UK & Ireland

Agilent Technologies Vacuum Products Division 6 Mead Road Oxford Industrial Park Tel.: +44 (0) 1865 291570

Fax: +44 (0) 1865 291571

